
68-82 DOOR Credit Card ORDERING ONLY on (800) 8669 DOC 117

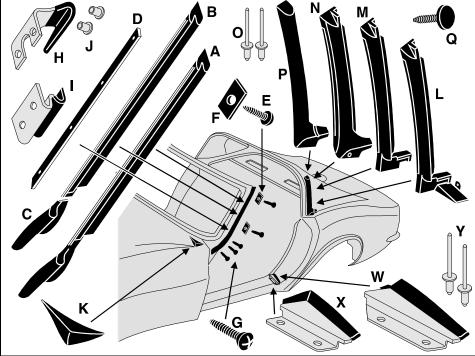

Windshield Post & Pillar

 A
 68-72 Post & Hinge Pillar Weatherstrip

 Tip When ordering these Post weathertstrips, item F is

 needed so the mount screws do not pull thru the rubber

 1 Piece Assembled Weatherstrips

 LH Post & Pillar 1 piece Weatherstrip

 1069508
 59.50

 RH Post & Pillar 1 piece Weatherstrip
 1069509
 59.50

 LH+RH Post & Pillar 1 piece Pair
 1069262
 118.50

 See Tips below
 1069262
 118.50

2 Piece Installation TIP

To create the look of a 1 piece weatherstrip when replacing only the upper post w/s or the lower pillar w/s follow these tips. Mount both the upper post and lower hinge weatherstrips to the body and fill the junction with black w/s adhesive. Cut a small piece of Saran wrap & spray one side with Silicone. Place the sprayed side over the weatherstrip & close the door. Allow to cure before removing

B 68-82 Windshield Post Weatherstrip LH Windshield Post Weatherstrip Only 1069516 29.45 RH Windshield Post Weatherstrip Only 1069517 29.45 **7** Tip When ordering the these Post W/S, item **F** is needed so the mtg screws do not pull thru the rubber C 68-72 Hinge Pillar Weatherstrip Only LH Hinge Pillar Weatherstrip Only 1069518 29.45 RH Hinge Pillar Weatherstrip Only 1069519 29.45 D 68-82 Post Weatherstrip Retainer Mount Seal These die cut Black sponge rubber seals prevents water leaks behind the windshield post weatherstrip retainers preventing frame rust out. Does 1 car 1069504 6.75 E Post Weatherstrip Mtg Screw 8 Piece Set These Black plated screws mount the rectangular post weatherstrip retainers. Does 1 car. 1069510 4.00 **Door Handle** 68 Gasket Set Die cut neoprene rubber.

69-82

68 Gasket 2 Piece Set 1051568 3.75 69-82 Gasket 2 Piece Set 1051549 3.45

F Post Weatherstrip Washer 4 Piece Set Mount the windshield post w/s with these special rectangular washers. Does 1 car. 1069514 7.9 G Hinge Pillar Weatherstrip Mount Screws Black plated 4 piece set. Does 1 car 1069511 2.5 Windshield Post "Blow-Out" Clips Keeps the side door glass from rattling. H 69-82 Upper "Blow-Out" Clip 2 regd Rubber dipped steel clip. NOS 1069560 31.2 Rubber dipped steel clip. Repro 1069512 9.5 77-82 Lower "Blow-Out" Clip 2 regd Un-dipped steel. 2 reqd 1069559 4.5 Rubber dipped steel clip. 1069513 9. J 69-82 Clip Mounting Rivet 4 Piece Set 69-76 1 set regd 77-82 2 sets regd 1069561 2.1 K Windshield Lower Filler Weatherstrip

Seals the windshield lower corner to the side fender.73-82 LH Filler Weatherstrip106952273-82 RH Filler Weatherstrip106952373-82 Lower Filler Mounting Screw SetBlack plated screws. Does 1 car.1069530

ł	Early 69 is used until Nov. 22, 1968 approx; Mid 69
2	used from Nov. 22, 1968 to Feb. 20, 1969 approx; <i>Late 69</i> use after Feb. 20, 1969 approx
	L 68-Early 69 Rear Door Glass Weatherstrip
	LH 1064531 42.95 RH 1064532 42.95
	68-E69 Black plated Mounting Screw Pair. 1069534 1.90 M Mid 69 Cpe Rear Door Glass Weatherstrip
	LH 1064534 42.95 RH 1064535 42.95
	N Late 69-77 Cpe Door Glass Weatherstrip
	USA LH 1064538 19.50 RH 1064539 19.50 China LH & RH Rear Dr Glass W/S pr 1064537 19.50
	O Late 69-77 Rear Weatherstrip Mount Rivet
	One pair. Does 1 car 1064540 1.90
•	P 78-82 Coupe Door Glass Weatherstrip These are the ones with internal steel supports, <i>not those</i>
-	Foreign ones that lack the inner steel.
v	USĂ LH 1064542 26.50 RH 1064543 26.50
A	Q 78-82 Rear Weatherstrip Fastener Set 6 Piece pop rivet style set Does 1 car 1064592 2.50
	Convertible Lock Pillar Weatherstrip
4	Early 69 used before Aug. 22, 1968 approx. Late 69 is after; uses an auxiliary plastic wedge
Ŷ	R 68-Early 69 Conv. Pillar Weatherstrip
	LH 1069528 24.00 RH 1069529 24.00
Y	S 68-Early 69 Pillar Weatherstrip Mtg 4 Pc Kit Black plated mount screws. Does 1 car. 1069530 2.50
	T Late 69-75 Conv. Lock Pillar Weatherstrip
t	LH 1069532 24.00 RH 1069533 24.00
7.95	U Late 69-75 Conv. Lock Pillar Wedges
ws	These LH & RH wedges mount right next to the pillar weatherstrips. Pair. Does 1 car. Select from
2.50	Authentic Black Molded Wedges 1069535 29.95
	Replacement Wedge Fillers 1069537 24.00
	V Late 69-75 Wedge Mount 12 Piece Set Black plated mount screws. Does 1 car 1069531 5.00
04.00	Door Water Diverters
31.20 9.50	W 72-77 Water Diverter about 4" long
	Repro LH 1069572 13.95 RH 1069573 13.95
4.50	NOS LH 1069563 29.50 RH 1069564 29.50
9.75	<i>New</i> 78-Early 79 Water Diverters the early 79 diverter have an additional metal Aluminum lip that wraps
2 7F	over and extends vertically up the edge of lock pillar
2.75	fiberglass panel. Late 79 diverters lacks this wrap feature.
	Repro LH and RH Pairs only 1069588 28.75 X Late 79-82 Water Diverter about 3" long
13.95	Repro LH 1069586 17.00 RH 1069587 17.00
40.00	

Coupe Rear Door Weatherstrip

13.95

2.50

NÖS

LH 1069565

4 piece rivet set. Does 1 car

35.00

Y 74-82 Diverter Mounting Rivet Set

RH 1069566

1069562

35.00

3.00