


59-62 Seville Grain Sunvisors


A 59-62 Sunvisors	83.00	Pair
Vinyl Cover, Internal Padding & Support.		
59-62 Black	1020400	83.00
59-62 Red	1020401	83.00
59-60 Turquoise	1020402	83.00
59-60 Frost Blue	1020403	83.00
61 Jewel Blue	1020404	83.00
61-62 Fawn Beige	1020405	83.00

59-67 Sunvisor Mounting

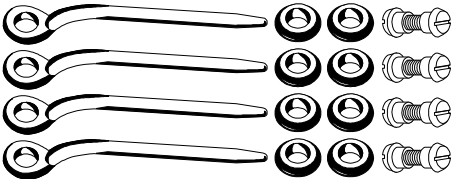

59-67 Sunvisor Mounting 20 Piece Kit
Includes 4 chrome support bars, 4 nuts, 4 screws & 8 trim washers. **Does 1 car.** 1021920 **15.75**

59-67 Sunvisor to Windshield Header Mounting 4 Piece Screw Set
Does 1 car. 1021921 **3.00**



63-64 Seville Grain Sunvisors

Vinyl Cover, Internal Padding & Support.

B 63 Coupe or 63-64 Convertible Sunvisors	79.50	Pr
63-64 Black 1020406 79.50		
63-64 Red 1020407 79.50		
63-64 Navy 1020408 79.50		
63-64 Saddle Tan 1020409 79.50		
64 Silver 1020394 79.50		
64 White 1020395 79.50		

C 64 Coupe Sunvisors	79.50	Pr
64 Black 1020410 79.50		
64 Red 1020411 79.50		
64 Navy 1020412 79.50		
64 Saddle Tan 1020413 79.50		
64 Silver 1020396 79.50		
64 White 1020397 79.50		

65-67 Madrid Grain Sunvisors

Vinyl Cover, Internal Padding & Support.


	B Convertible	C Coupe
	79.50 Pr	79.50 Pr
65-67 Black	1020414	1020424
65-67 Red	1020415	1020425
65-67 Brite Blue	1020416	1020426
65-67 Green	1020419	1020429
65-66 Medium Saddle	1020417	1020427
65-67 White	1020421	1020431
65-66 Silver	1020420	1020430
66 Navy	1020398	1020399
65 Maroon	1020422	1020432
67 Dark Saddle	1020418	1020428
67 Teal Blue	1020423	1020433

68 Madrid Grain Sunvisors

Vinyl Cover, Internal Padding & Support.

E 68 Sunvisors	79.00	Pr
68 Black 1020434	68 Red 1020435	
68 Brite Blue 1020436	68 Saddle 1020437	
68 Tobacco 1020438	68 Gunmetal 1020439	
68 Dark Blue 1020433		

68 Only Sunvisor Mounting 20 Piece Kit includes 4 chrome support bars, 4 nuts, 4 screws & 8 trim washers. **Does 1 car.** (Left to Right order is #1435) 1021949 **49.95**

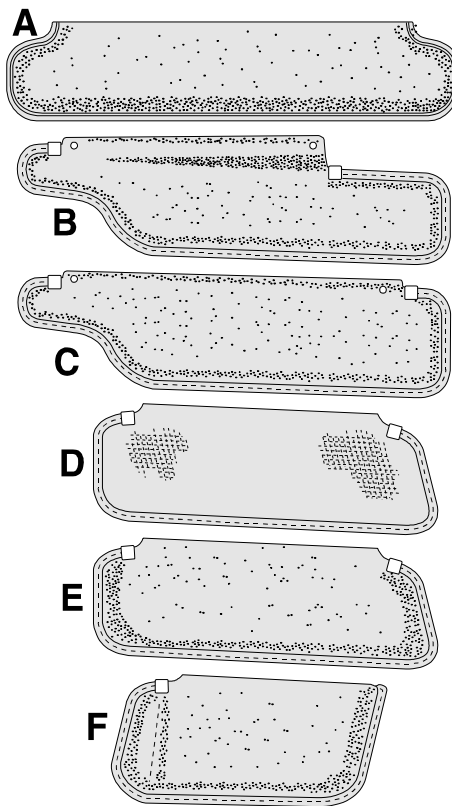

69-76 Sunvisors



Vinyl Cover, Internal Padding & Support.
Comfortweave Sunvisors are used with Standard Interiors on 69-75 models. Madrid Grain Sunvisor are used with Deluxe Interiors on 69-75 models & all 76 models.

D Comfortweave 79.00 Pr
E Madrid 79.00 Pr

69-73 Black	1020440	1020453
69-72 Red	1020441	1020454
69-70 Brite Blue	1020442	1020455
69 Saddle	1020443	1020456
69 Gunmetal	1020444	1020457
69-70 Green	1020445	1020458
70-72 Light Saddle	1020495	1020496
70-72 Dark Saddle	1020447	1020460
71-72 Dark Blue	1020448	1020461
71 Green	1020449	1020462
73 Medium Saddle	1020450	1020463
73 Dark Saddle	1020497	1020498
73 Oxblood	1020451	1020464
73 Dark Blue	1020452	1020465
74-75 Black	1020466	1020471
74-75 Medium Saddle	1020467	1020472
74-75 Oxblood	1020468	1020473
74-75 Dark Blue	1020469	1020474
74-75 Silver	1020470	1020475
76 Black		1020476
76 Buckskin		1020477
76 Dark Brown		1020478
76 Smoke Gray		1020479
76 Firethorn		1020480
76 White		1020481
76 Blue Green		1020482

69-76 Sunvisor Mounting

68-76 Support Bar to Windshield Header Mounting **Screw 4 Piece Kit**
Does 1 car. 1021931 **2.95**

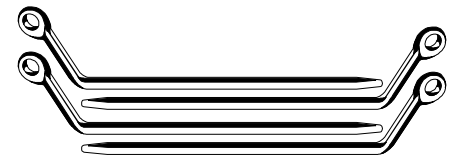

69-76 Sunvisor Chrome Mounting Rod 4 Piece Set
2 inner & 2 outer rods. **Does 1 car.** 1021930 **22.00**


77-82 Wallaby Grain Sunvisors

F 77-Early 79 Sunvisors	42.50	Ea
77-Early 79 Black 1020483	77-Early 79 Red 1020484	
77-Early 79 Dark Blue 1020485	77 Buckskin 1020494	
77 Smoke Gray 1020486	77 White 1020487	
77-78 Dark Brown 1020488	78 Pace Silver 1020489	
78-Early 79 Doeskin 1020491	78 Saffron 1020490	
78-Early 79 Oyster 1020492	E79 Dk Geen 1020493	

Early 79 LH Does Not telescope. Late 79 telescopes.

F LH or RH without Tele or Mirror	42.50	Ea
G LH with Telescoping Rod	69.50	Ea
H RH with Vanity Mirror Cutouts	42.50	Ea


	F LH or RH	G LH Tele	H RH Mirror
Late 79-81 Black	1020483	1020521	1020501
Late 79-81 Red	1020484	1020522	1020502
Late 79-81 Dark Blue	1020485	1020523	1020503
Late 79-80 Doeskin	1020491	1020524	1020504
Late 79-80 Oyster	1020492	1020525	1020505
Late 79 Green	1020493	1020536	1020516
80 Claret	1020546	1020526	1020506
81 Cinnabar	1020540	1020530	1020510
81 Silver	1020541	1020531	1020511
81-82 Camel	1020539	1020529	1020509
82 Red	1020537	1020527	1020507
82 Dark Blue	1020538	1020528	1020508
82 Charcoal	1020542	1020532	1020512
82 Gray	1020543	1020533	1020513
82 Silver Green	1020544	1020534	1020514
82 Collector	1020545	1020535	1020515

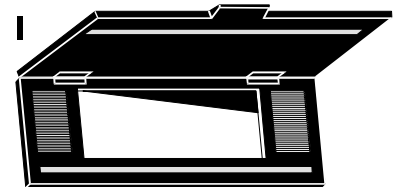

I 79-82 Illuminated Visor Mirror Select.. 103.75

79-82 Black 1020380	79-82 Dark Blue 1020381
79-82 Doeskin 1020382	79-82 Oyster 1020383
79-82 Red 1020384	

77-82 Sunvisor Mounting

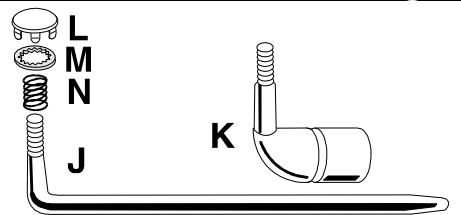

J 77-82 Sunvisor Pin except models with LH Telescoping design. 2 reqd	1021940	9.95
77-82 Visor Pin Upper & Lower Bushings help solve sagging visors. 2 reqd	1014950	0.00
K L79-82 Sunvisor Pin with Tele USA	1021948	20.00
L 77-82 Visor Mounting Hole Plug Chrome plated. Pair Does 1 car.	1021947	4.00
77-82 NOS Visor Spring Mounting Hardware - none better		
M Spring Retainer internal locking NOS	1021946	5.50
N Tension Spring 1-2 reqd <i>keeps visor positioned</i> NOS GM these are the best	1021945	6.00
M+N Reprto Retainer & Spring	1021951	8.00